


# I/A Series® Software WonderLink

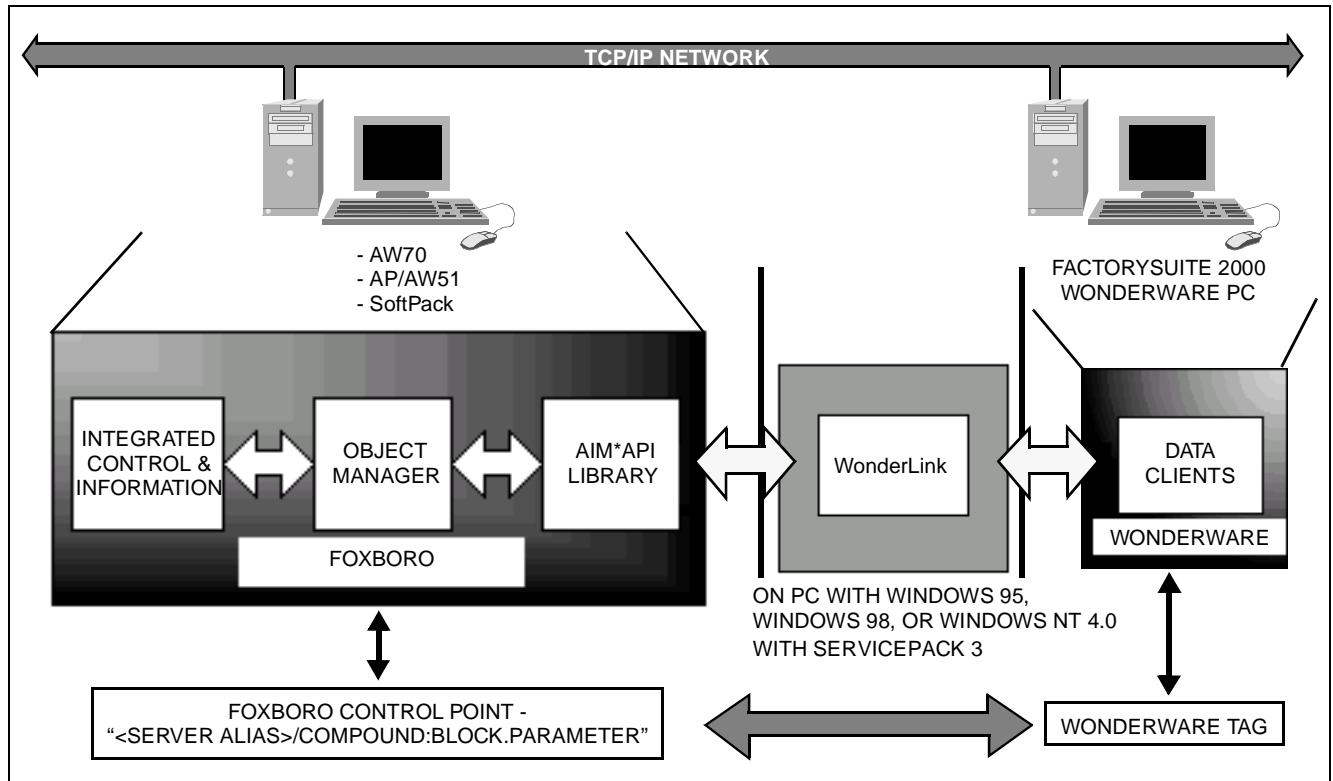

WonderLink is a Windows-based application which serves as a real-time read/write data interface between I/A Series integrated control information and Wonderware FactorySuite 2000 data client applications, such as Wonderware's InTouch™ and Scout.

WonderLink software can be used with both standard off-the-shelf Foxboro and Wonderware software and systems.

WonderLink software has all of the functionality of a Wonderware I/O Server and beyond.


It provides the following features to its FactorySuite 2000 data clients:

- access to I/A Series control, information objects and status values via either Solaris or Windows NT stations

- a one-to-one association between Wonderware tags and Foxboro control and information objects (Wonderware documentation contains information on Wonderware tags.)
- automatic connection to the I/A Series network on start-up for Wonderware data clients via standard TCP/IP protocol over a corporate or control network
- a complete list of I/A Series control points in the standard Compound:Block.Parameter format from which you can select when configuring Wonderware InTouch displays using the Wonderware Tag Browser
- the ability to access I/A Series alarm status information in Wonderware FactorySuite 2000 applications

- the ability to acknowledge I/A Series and Wonderware alarms either together or separately.

As shown in Figure 1, WonderLink software, the data clients, and the I/A Series control and information objects can exist in the same workstation, or in remote workstations connected using TCP/IP communication.

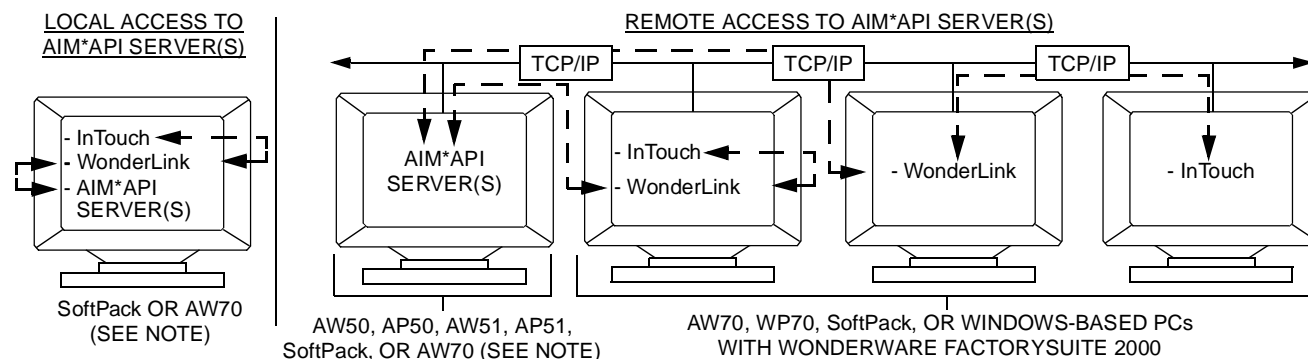

NOTE: The provided AIM\*API server may be installed on any SoftPack, AW70, AW50, AP50, AW51, or AP51 processors shown. A given WonderLink application instance can communicate with one or more local or remote AIM\*API servers. A given AIM\*API server can communicate simultaneously with multiple WonderLink application instances. InTouch can communicate simultaneously with multiple WonderLink application instances.

Figure 1. Example WonderLink, Data Client (InTouch), and I/A Series Control and Information Locations

## SYSTEMS REQUIREMENTS

### Foxboro I/A Series

AW70 Configurations

Minimum Version 6.0

SoftPack Configurations

Minimum Version 6.0

AP/AW51 Information Network Configurations

Minimum Version 3.4

### Wonderware

InTouch (Minimum Version 3.01) - or -

FactorySuite 2000 (includes SuiteLink)

Both require Wonderware ServicePack 1

### WonderLink

PC with Windows 95, Windows 98, or

Windows NT 4.0 with ServicePack 3,

Able to run Wonderware FactorySuite 2000,

I/A Series (as an AW70), or I/A Series SoftPack

### The Foxboro Company

33 Commercial Street

Foxboro, Massachusetts 02035-2099

United States of America

<http://www.foxboro.com>

Inside U.S.: 1-508-543-8750 or 1-888-FOXBORO (1-888-369-2676)

Outside U.S.: Contact your local Foxboro Representative.

Foxboro and I/A Series, are trademarks of The Foxboro Company.

Solaris is a trademark of Sun Microsystems, Inc.

Windows 95, Windows 98, and Windows NT are registered trademarks of Microsoft Corporation.

InTouch, WindowViewer, SuiteLink, and FactorySuite 2000, and Wonderware are trademarks of Wonderware Corporation.

Copyright 1999 by The Foxboro Company

All rights reserved