




Foxboro™ DCS

Proportional-Integral-Derivative (PID) Controller

PSS 41S-3PID

Product Specification

May 2019

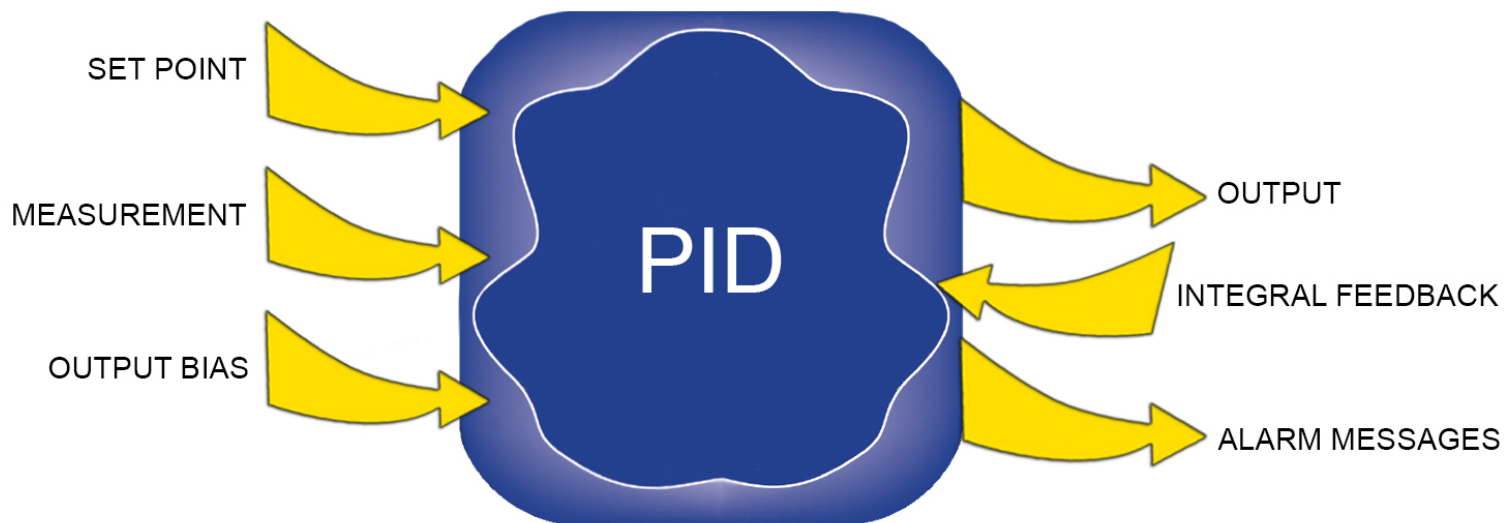

Legal Information

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this guide are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owners.

This guide and its content are protected under applicable copyright laws and furnished for informational use only. No part of this guide may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the guide or its content, except for a non-exclusive and personal license to consult it on an "as is" basis. Schneider Electric products and equipment should be installed, operated, serviced, and maintained only by qualified personnel.

As standards, specifications, and designs change from time to time, information contained in this guide may be subject to change without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this material or consequences arising out of or resulting from the use of the information contained herein.

Overview

The Proportional-Integral-Derivative (PID) block performs the functions of a traditional three-term interacting PID controller for feedback control of flow, temperature, pressure, level, and other process loops.

The PID block (Figure 1) can be configured to operate in one of the following five controller modes:


- Proportional-plus-Integral-plus-Derivative (PID)
- Proportional-plus-Integral (PI)
- Proportional-plus-Derivative (PD)
- Proportional (P)
- Integral (I)

The output signal is computed in response to the set point and the measurement and the particular configured controller mode option.

Integral control action is generated by the integral feedback signal through a first-order lag filter with a time constant equal to the integral time parameter. The positive feedback arrangement of this loop produces the desired integral control action. The integral feedback signal is usually connected to the back calculation output of the downstream block, to avoid integral windup.

The derivative action of the PID or PD controller modes is responsive only to the measurement signal. Through proper filtering, the derivative feature of the controller is less sensitive to measurement noise, allowing for effective use of derivative action. The filter time is adjustable between 0.1 and 0.02 (0.1 = default) of the derivative time.

Figure 1. PID Block, Simplified Diagram

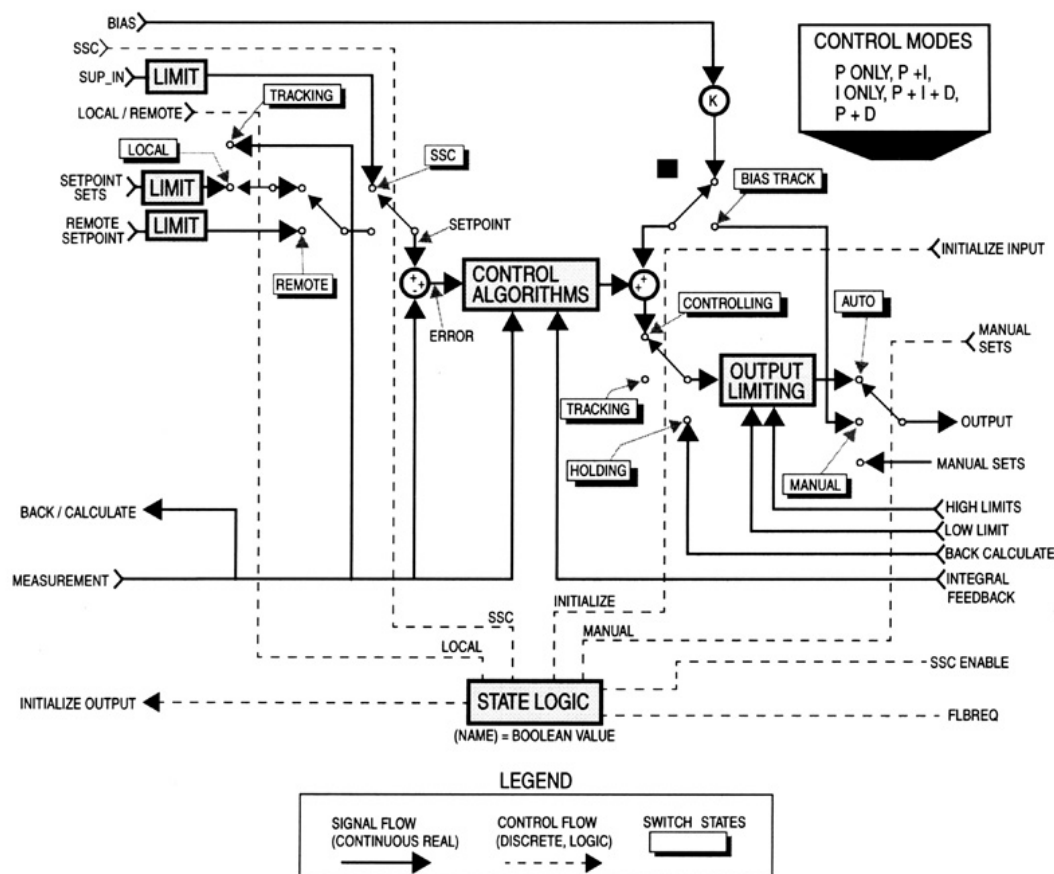

Outputs may be clamped between specified limits.

A complete complement of alarming capability (absolute, deviation, and output) is available with user-specifiable text for each alarm type. The delayed alarming feature reduces the number of nuisance alarms as a block parameter crosses over an alarm limit multiple times in a short period.

The status (local/remote, auto/manual, and tracking) of a given controller is available for connection(s) to other control blocks. This helps ensure proper action of upstream blocks connected to a given controller when the operator assumes local control.

Supervisory Control

Supervisory Control (SSC) allows a user's application program to perform supervisory control over the PID block's set point. SSC can be enabled/disabled by an operator, or enabled by the supervisory application program at a control block group or control block level. If SSC is enabled in the control block, the back calculated value status requests the application program initialization. The application program must send the supervisory set point to the block periodically. While SSC is enabled, the control block parameters associated with local set point cannot be set by the operator. If the operator asserts fallback or if a supervisory application program failure is detected, the control block falls back to a configured fallback mode (Manual, Auto, Remote, or Local).

Standard Features


- Manual/Auto control of the outputs, which can be initiated by either a host process or another block
- Local/Remote set point source selection
- Enhanced derivative filtering for improved controller performance
- Adjustable derivative gain
- External integral feedback to help prevent windup during closed loop operation
- Assignable engineering range and units to measurement, bias, and output
- Automatic scaling, based on assigned engineering ranges, so that the controller gain is normalized in proportional band
- Output biasing with scaling
- Output clamping between variable output limits
- Bad inputs detection and handling
- Bumpless transfer of the output signal when the block returns to controlling operation in Automatic, which is inherent in all controller modes
- Automatic cascade handling that includes:
 - Explicit initialization input/output parameters that provide proper coordination and initialization of cascade schemes
 - Back calculation of the reference or set point input for the upstream block to provide bumpless cascade operation
- Set point clamp limits in Local, Remote, or Supervisory modes

Options

- Set point tracking of the measurement signal allows bumpless return to automatic control when the block or any downstream block returns to normal operation
- Manual override forces the block to manual if either the measurement or feedback inputs are off scan, disconnected, or bad. Return to automatic control requires external intervention
- Absolute alarming of the measurement
- Deviation alarming of the set point – measurement error signal
- Absolute alarming of the output
- Manual alarming allows all configured alarm options to be operational in manual
- Reverse action – measurement increases cause controller output to increase
- Output clamping when block is in manual
- Bias tracking forces bias to track the output when block is in manual. Operational only in the P and PD controller modes
- Local set point ramping and limiting - the local set point can be ramped to a new target value at a user set rate by toggling a switch; ramping stops when the set point reaches the target or when the controller is placed in manual
- Workstation lock access allows write access to only the Display Manager that owns the lock
- Loop identifier allows the user to identify the loop or process unit that contains the block
- Supervisory Control (SSC) of the block's set point

Additional Features

- Delayed alarming. A configurable timer delays alarm detection or return-to-normal messages for a specific alarm to reduce the number of alarm messages generated when a block parameter crosses back and forth over an alarm limit.
- Quality Status output parameter provides a single source for the block's value record status, block status, and alarm status.

 **WARNING:** This product can expose you to chemicals including lead and lead compounds, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.p65warnings.ca.gov/.

Schneider Electric Systems USA, Inc.
38 Neponset Avenue
Foxborough, Massachusetts 02035–2037
United States of America

Global Customer Support: <https://pasupport.schneider-electric.com>

As standards, specifications, and design change from time to time, please ask for confirmation of the information given in this publication.

© 2014–2019 Schneider Electric. All rights reserved.

PSS 41S-3PID, Rev A