

Foxboro™ DCS

G85 Trident Enclosure

PSS 41H-2G85

Product Specification

January 2020





Legal Information

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this guide are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owners.

This guide and its content are protected under applicable copyright laws and furnished for informational use only. No part of this guide may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the guide or its content, except for a non-exclusive and personal license to consult it on an "as is" basis. Schneider Electric products and equipment should be installed, operated, serviced, and maintained only by qualified personnel.

As standards, specifications, and designs change from time to time, information contained in this guide may be subject to change without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this material or consequences arising out of or resulting from the use of the information contained herein.

Overview G85 Trident Enclosure

Overview

The G85 EcoStruxure™ Triconex™ Trident Enclosure is specifically designed for housing Triconex Trident controllers and I/O system in areas where front access only to the enclosure's equipment is desired, such as when an enclosure must be placed against a wall. It is available as a vented or sealed enclosure. It can be configured with up to ten Trident I/O baseplates, one Main Processor (MP) baseplate, and one Communication Module (CM) baseplate.

The G85 vented enclosure is a free-standing, floor mounted unit with an IP 43/55 rating for location in mild (ordinary) environmental areas.

The G85 sealed enclosure is a free-standing, floor mounted unit, with options for either an IP 55 or IP 66 rating for location in harsh environments. Sealed enclosures with an IP 66 rating help provide a higher level of protection from airborne contamination.

Multiple G80/G85 enclosures can be installed connected to one another to maximize the use of floor space and ease of cabling. The enclosures can be bayed together using kits P0931UR/US/UT, as discussed in *Enclosures and Mounting Structures Site Planning and Installation User's Guide* (B0700AS).

These enclosures and their configurations have been tested and qualified by Foxboro for use with the Trident controllers and I/O baseplates specified in *Technical Product Guide for Trident vX Systems*. Request the latest revision from Triconex. The document title changes with each product revision.

NOTE: The end-user is responsible for locating adequate inlet ventilation to maintain proper operation of the enclosure's equipment, through ventilation on the rear door or a side wall, or from an adjoined cabinet.

G85 Trident Enclosure Overview

Features

 Vented or sealed enclosure accommodates up to ten Trident I/O baseplates, one Main Processor (MP) baseplate, and one Communication Module (CM) baseplate

- Main power entry includes disconnect terminal blocks for 120/240 V AC or 125 V DC systems, or 10 A, Type D, double pole circuit breakers for 120/240 V AC systems
- All equipment accessible from the front of the enclosure only
- Standard redundant 24 V DC field and logic power 480 W (two field I/O power supplies) or 960 W (four field I/O power supplies)
- Enclosure selection for use in ordinary (IP 43/55) or harsh (IP 55/66) rated environments
- Optional door intrusion monitoring switches
- Alarm contact terminal block assembly for Trident MP baseplate alarming, door intrusion monitoring switches, enclosure temperature switch, and field and logic power supply status
- · Optional monitoring to detect fan failure
- Compact design to minimize use of floor space with front-only access that allows the maximum density of enclosures in a control room environment
- Available PVC or non-PVC wireways for controller Ethernet and serial cabling
- Generous 76 mm x 102 mm (3 in x 4 in) wire ducts with adequate capacity for most wire management
- Conveniently placed eyebolts for transporting and lifting the enclosures
- A 100 mm (3.9 in) plinth total enclosure height of 2,160 mm (85.0 in)
- Comfort handles with push-button/keylocks
- Three ground points; two protective ground studs, one isolated protective ground rail and one isolated instrument ground rail

Ingress Protection

The metal enclosures provide the outer layer of protection for the control electronics. Other layers are provided by the module covers and built into the modules. This approach to protection means that a minimum of contaminants in the plant environment reaches the control components, thus greatly extending the life of the equipment.

For sealed IP 55/66 certified enclosures, heat is transferred from the interior surfaces of the enclosure and then dissipated by the enclosure's exterior surfaces into the plant environment. Air is not exchanged between the enclosure's interior and the outside environment. Therefore, contaminants are minimized inside the enclosure. Sealed IP 55/66 versions can be used outdoors in sheltered locations. The enclosures support convenient bottom cable entry for termination assembly (TA) cabling and power wiring.

Dual Thermostat

An optional dual (high/low) thermostat is available to monitor enclosure temperature extremes, with the exception of Zone II, Class I, Division 2 applications.

Overview G85 Trident Enclosure

Door Intrusion Monitoring

An optional door intrusion monitoring switch is available for the front door on the enclosure. Each switch is prewired to a set of alarm status terminal blocks.

Monitoring to Detect Fan Failure

For enclosures with roof-mounted fans, an optional fan failure monitoring system is available. In the case of a detected failure of the roof-mounted fans, the system triggers an alert.

Vented Enclosure Design Options

The G85 vented enclosure is available with either roof-mounted or door-mounted fans.

Roof-mounted fans provide the best performance for cooling, and provide a lower noise-level than the door-mounted fans. However, roof-mounted fans can reduce the overall ingress protection rating. For customers who plan to modify the swing direction of their enclosure doors, fans mounted on the roof allow the process to proceed more smoothly.

Door-mounted fans provide the highest level of ingress protection for vented enclosures.

Trident Baseplate Mounting

The enclosure can contain various types of vertically mounted Trident I/O baseplates, which accommodate different quantities and types of Triconex I/O and communication modules listed in *Technical Product Guide for Trident vX Systems*.

For the enclosure to accommodate a higher density of modules and maximize accessibility and space for TA cables, the baseplates are mounted in a vertical position. Vertical cable runs minimize the need to dress and route cables at ninety-degree angles while providing a direct path for cable access to the bottom of the enclosure. While improving layout, vertical orientation also reduces any horizontal obstructions, thus increasing airflow and improving overall thermal performance.

Power and Grounding

Power wiring to the enclosure is routed through the bottom (through removable gland plates) of the enclosure. Dual power input feeds terminate at dedicated primary and secondary power distribution terminal blocks or circuit breaker assemblies.

Grounding

Two M8 studs (one for each enclosure side) provide a central ground point and dedicated grounding points when baying enclosures together.

An isolated protective ground rail and an isolated instrument ground rail are available for additional ground points and may be used for cable shields.

G85 Trident Enclosure Overview

Power Distribution

These enclosures are available with a dedicated assembly for customer main power. Two types of power distribution are available with:

- Disconnect terminal blocks for 120/240 V AC or 125 V DC systems. This method
 of power entry also has fused, knife disconnect terminal blocks for isolating the
 main power, as well as independent knife disconnect terminal blocks for each
 device, for ease of service.
- 10 A, Type D, double pole circuit breakers for 120/240 V AC systems.

The standard 24 V DC field power supplies include a distribution terminal block assembly for distribution of 24 V DC power. Each point includes a serviceable knife disconnect.


Utility power is supported through a dedicated terminal block or circuit breaker assembly which provides independent disconnects for light and fan circuits as well as additional blocks for the customer to install utility outlets.

The enclosures may be ordered without these power distribution terminal blocks when the customer has requirements for power distribution specific to regional electrical codes.

Optional bus bars for field wiring shields are available. Wiring is restricted to preconfigured wireways, available in PVC or non-PVC versions.

Overview G85 Trident Enclosure

Figure 1 - G85 Trident Enclosure, Front Left View

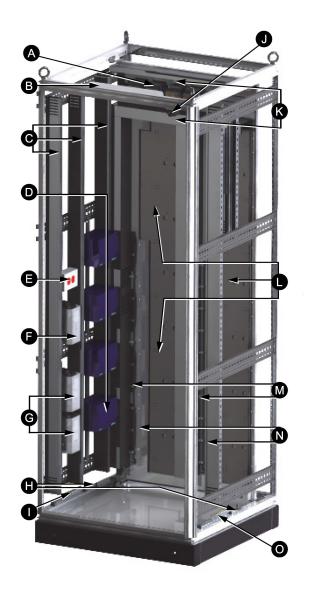

Lege	end		
Α	24 V DC Logic Power Distribution Disconnects	I	Protective Ground Rail
В	LED Light	J	Door Intrusion Monitoring Switch
С	25 mm x 75 mm (1 in x 3 in) Wire Duct for ac Power Distribution	K	50 mm x 100 mm (2.0 in x 3.9 in) Wire Duct for 24 V DC Wiring to Baseplates
D	480 W (20A) Redundant 24 DC Supplies For Logic Power	L	Trident I/O, MP and CM Baseplates will be mounted per configuration (Not Supplied)
Е	2C Duplex Utility Outlet (Not Supplied)	М	Bus Bars for Field Wiring Shields
F	ac Utility Power Terminal Blocks or Circuit Breakers	N	75 mm x 100 mm (3.0 in x 3.9 in) Wire Duct for Field Wiring
G	Primary and Secondary Power Distribution Disconnects or Circuit Breakers	0	Isolated/Instrument Ground Rail
Н	Protective Ground Studs		

G85 Trident Enclosure Overview

Figure 2 - G85 Trident Enclosure, Front Right View



Lege	Legend		
Α	50 mm x 100 mm (2.0 in x 3.9 in) Wire Duct for 24 V DC Wiring to Baseplates	E	Dual (High/Low) Thermostat
В	Protective Ground Studs	F	Alarm Monitoring Terminal
С	Protective Ground Rail	G	25 mm x 37 mm (1.0 in x 1.5 in) Wire Duct for Alarm Wiring
D	LED Light	н	Isolated/Instrument Ground Rail

Enclosure Features and Options

Feature	Availability
Base Enclosure	 Vented IP 43/55 rated enclosure with single front and rear door-mounted fans (120 V AC or 240 V AC- dual fans) or roof-mounted fans (120 V AC or 240 V AC - dual fans), or
	Sealed IP 55 rated enclosure, or
	Sealed IP 66 rated enclosure
Enclosure Access	Front access only
Front Door	Solid front door with inlet vents
Cable Entry	Bottom cable entry
Sidewalls	Options configurable based on baying requirements
Door Handle	Comfort handle with push button/keylock
Door Mounting	Universal mounting for left and right-hand door swing (left-hand is default)
Ethernet/Serial Wiring	PVC or non-PVC wireways for Ethernet/Serial I/O signal cabling
Equipment Supported	Up to ten Trident I/O baseplates, one Main Processor (MP) baseplate, and one Communication Module (CM) baseplate
Enclosure Lighting	Universal enclosure light with motion activation
Thermostat	Dual temperature thermostat
Security	Optional door intrusion monitoring switch - one per door
Fans	Door-mounted or roof-mounted fans - optional fan failure monitoring feature
Grounding	Two protective ground studs
	One isolated protective ground rail
	One isolated instrument ground rail
Main Power	100-250 V AC, 50-60 Hz, 125 V DC input primary only or primary and secondary power, or
	100-250 V AC, 50-60 Hz, 125 V DC input primary and 24 V DC secondary power
	Customer configured power entry (no terminal blocks supplied)
Field Power	Standard redundant 24 V DC field power - 480 W (two field I/O power supplies) with dedicated terminal block or circuit breaker assemblies
	Redundant power distribution terminal block assemblies for customer configured power entry
Alarm Contact	Alarm contact terminal block assembly for Trident MP baseplate alarming, door intrusion monitoring switches, enclosure temperature switch, and field and logic power supply status
Utility Power	120 V AC or 240 V AC utility power with disconnect terminal blocks or 10 A, Type D, double pole circuit breakers

G85 Trident Enclosure Functional Specifications

Functional Specifications

Enclosures	The enclosures are free-standing, floor mounted, steel industrial enclosures containing:	
	 Up to 10 Triconex™ Trident I/O baseplates, one Main Processor (MP) baseplate, and one Communication Module (CM) baseplate (vented or sealed enclosure) 	
	24 V DC field and logic power supplies (redundant power)	

Environmental Specifications

	Operating (Ambient)	Storage	
Temperature	Thermal performance of the G85 enclosure meets the convection cooling requirements described in <i>Planning and Installation Guide for Trident vX Systems</i> (a). • Vented (Thermal Loading Limit): • -20 to +60°C (-4 to +140°F): Up to 750 Watts (Average) • -20 to +55°C (-4 to +131°F): 750 to 1000 Watts (Maximum) • Sealed (Thermal Loading Unit): • -20 to +50°C (-4 to +122°F): Up to 400 Watts (Average) • -20 to +45°C (-4 to +113°F): 400 to 500 Watts (Maximum)	-40 to 70°C (-40 to 158°F)	
Relative Humidity	5 to 95% (noncondensing)		
Ingress Protection Ratings	Vented: Door-Mounted Fans: IP 55 to EN 60 529/NEMA 12 Roof-Mounted Fans: IP 43 to EN 60 529/10.9191/NEMA 12 Sealed: IP 55 to EN 60 529/NEMA 12 IP 66 to EN 60 529/NEMA 4		
Acoustic Noise Level ^(b)	 Roof-Mounted Fans: 61 dB (A) at 1 m/58 dB (A) at 3 m Door-Mounted Fans: 64 dB (A) at 1 m/62 dB (A) at 3 m Sealed Enclosure (No Fans): Ambient/Ambient 		
Dual Thermostat	 High Alarm Setting: Opens on alarm, Range - 0 to 60°C (32 to 140°F) Low Alarm Setting: Opens on alarm, Range - 0 to 60°C (32 to 140°F) 		
Agency Certification	Empty enclosure is UL and UL-C approved. Enclosure meets all applicable European Union directives and is CE compliant. Final installed enclosures populated with your equipment should be inspected by your local UL/CSA committee or other safety governing organization, if required. A complete list of certifications is available from the enclosure vendor.		
Area Designation	nation Per customer order, vented for general purpose or sealed for hazardous area (Zone II (IEC)/ Class I, Division 2, (North America)		
	(a) Document title changes with each product revision. To obtain the latest version of the <i>Planning and Installation Guide for Trident vX Systems</i> document, contact IPS Global Client Support.		
(b) Under normal ope	rating conditions, with both fans running, at enclosure's mi	d-height at 46 dB (A) ambient noise.	

G85 Trident Enclosure Physical Specifications

Physical Specifications


Weight	The weight of the enclosure is dependent upon the particular configuration and Triconex
g	equipment selected. Consult with a Foxboro representative if precise weight figures are required.
	Vented Enclosure (Max. Configuration):
	800 mm x 800 mm (31.5 in x 31.5 in) - 261 kg (575 lb)
	Side Panel:
	800 mm x 800 mm (31.5 in x 31.5 in) - 8 kg (18 lb)
Mounting	Floor
	AADANGER
	HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH
	To help prevent injury, this enclosure must be bolted down. See <i>Enclosures and Mounting Structures</i> — <i>Site Planning and Installation User's Guide</i> (B0700AS).
	Failure to follow these instructions will result in death or serious injury.
Construction	Material:
	Doors:
	Sheet steel, 2.0 mm (14 ga)
	 Frame, Roof, Side Panels, Gland Plates:
	Sheet steel, 1.5 mm (16 ga)
	Base/Plinth:
	Sheet steel and plastic
	Finish:
	∘ Frame:
	Dipcoat-primed, RAL 7044 smooth
	 Roof, Side Panels, Doors:
	Dipcoat-primed, powder-coated, RAL 7035 (light gray) textured
	∘ Base/Plinth:
	Dipcoat-primed, RAL 7022 (umbra gray) smooth, plastic cover caps RAL 9005 (jet black)
	Gland Plates and Internal Hardware:
	Zinc-plated, passivated
Cable Entry	Vented Enclosure:
	Bottom through gland plate(s)
	Sealed Enclosure:
	Bottom through steel panel and customer cutouts in panel

Physical Specifications G85 Trident Enclosure

Grounding	Roof, Side Walls, Gland Plates:
	Automatic potential equalization built in
	Front Door:
	Dedicated 4 mm ² (11 ga) ground strap to enclosure frame
	Enclosure:
	Two protective ground M8 studs (one for each enclosure side)
	An isolated protective ground rail and an isolated instrument ground rail are provided for additional ground points
Power Input Terminals	Disconnect Terminal Blocks;
	∘ Type:
	Ring Lug
	∘ Wire Size:
	Up to 6 mm ² (10 AWG)
	∘ Ring Lug Size:
	M4 Maximum (DIN 46 234/46 237), 9.6 mm maximum O.D.
Circuit Breakers	Type:
	Compression
	Wire Size:
	∘ Solid:
	Up to 6 mm ² (3 AWG)
	∘ Stranded:
	Up to 4 mm ² (8 AWG)
TA Cabling	Universal mounting straps are supplied for attaching, routing, and strain relieving of Triconex termination cables. Each strap supports up to a 75 mm (3 in) diameter cable bundle.

G85 Trident Enclosure Dimensions - Nominal

Dimensions - Nominal

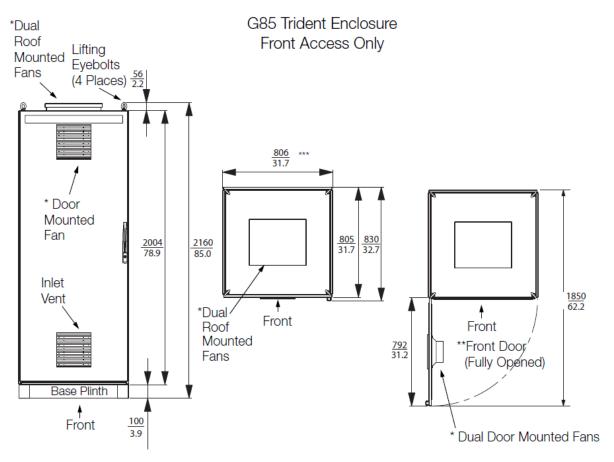

^{*} Vented enclosures only — either roof- or door-mounted configurations can be ordered.

^{**} Doors are factory-configured for left-hand swing, but can be reconfigured at site for right-hand swing.

^{***} With side panels, without side panels 800/31.5.

Related Product Documents G85 Trident Enclosure

Related Product Documents

Document Number	Description	
PSS 41H-2G80	G80 Trident Enclosure	
B0700AS	Enclosures and Mounting Structures — Site Planning and Installation User's Guide	
ISA-S71.04-1985 (not Foxboro-supplied)	Environmental Conditions for Process Measurement and Control Systems: Airborne Contaminants	
9791034-XXX ^(a)	Technical Product Guide for Trident vX Systems	
9720110-XXX ^(a)	Planning and Installation Guide for Trident vX Systems	
9720111-XXX ^(a)	Communication Guide for Trident vX Systems	
9720112-XXX ^(a)	Safety Considerations Guide for Trident vX Systems	
(a) Document title and document part number changes with each product revision		

⁽a) Document title and document part number changes with each product revision. Request latest revision from Triconex.



WARNING: This product can expose you to chemicals including lead and lead compounds, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.p65warnings.ca.gov/.

Schneider Electric Systems USA, Inc. 38 Neponset Avenue Foxboro, Massachusetts 02035–2037 United States of America

Global Customer Support: https://pasupport.schneider-electric.com

As standards, specifications, and design change from time to time, please ask for confirmation of the information given in this publication.

© 2020 Schneider Electric. All rights reserved.